


NeuraLaserColor II Accessories – Continuous Form Attachment (CFA) Setup

- 1** Remove CFA from the printer accessory box.

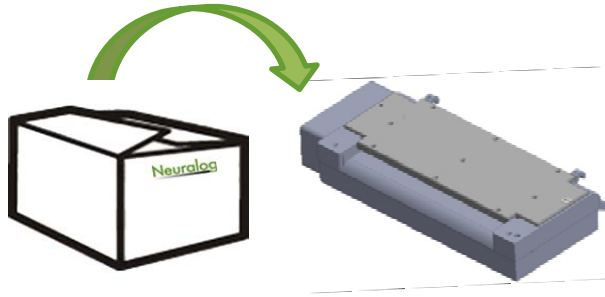

- 2** Turn NeuraLaserColor power **OFF**.



- 3** Using 2 hands, attach CFA to printer rod, aligning the clips.



The CFA will snap in place.

- 4** Connect round CFA cable to printer by aligning tab.



- 4a** Push on **green** wire to flat connector above round cable port.

- 5** Turn NeuraLaserColor power **ON**.

CFA goes through a boot-up sequence. The LED light will turn green when complete.



- 6** Access Touch Screen Operator Panel to configure printer for network use.

Select Menu Button in lower right corner.

- > Network/Ports
- > Standard Network
- > STD NET SETUP
- > TCP/IP
- > Enter IP Address



- 7** Align paper box with CFA.

Using 2 hands, feed the paper evenly into the CFA until the paper loads.

- > Mark Side Up
- > Mark on Left
- > First page with Mark



- 8** Insert CD to install NeuraView and the NeuraLaserColor II Print Driver.

